

R&R Games  
Presents

# Hide & Seek Safari®



**CAUTION:** This product uses small batteries which should be kept away from small children. Make sure batteries are inserted correctly and the battery door screwed in place. Do not mix old and new batteries or alkaline, standard or rechargeable batteries.

**BATTERY INSTALLATION:** 1. Requires two AA alkaline batteries (wand) and one 9v alkaline battery (Animal). 2. When the batteries run low on power, the Animal's beacon will be too faint for the wand to pick up and the wand's lights will be dim and not work properly. Replace the batteries at this time. 3 - Open the battery door with a screwdriver. 4 - Install new batteries as shown in the polarity diagram (+/-) inside the battery compartment. 5 - Replace battery door securely and tighten battery door screw.

Trouble Shooting:

**A - Toy does not turn on or respond. Try one or more of the following:** 1 - Remove Batteries and put them back in making sure polarity is correct (+/-). 2 - Make sure battery cover is correctly secured. 3 - Clean battery contacts with rubbing alcohol. 4 - Install new batteries.

**B - Wand does not pick up any Animal signal until extremely close or behaves erratically:** 1 - Install new battery in Animal.

**C - Wand fails to light up or lights are too dim or cannot pickup signal from Animal:** 1 - Check to make sure both the Animal and the wand are switched on. 2 - Replace batteries in wand.

## BATTERY SAFETY

Replacement of batteries must be done by adults. Follow the polarity (+/-) diagram in the battery compartment. Promptly remove dead batteries from the toy and dispose of used batteries properly. Only batteries of the same or equivalent type as recommended are to be used. DO NOT incinerate used batteries. DO NOT dispose of batteries in fire, as batteries may explode or leak. DO NOT mix old and new batteries or types of batteries (i.e. alkaline/standard) DO NOT use rechargeable batteries. DO NOT recharge non-rechargeable batteries. DO NOT short-circuit the supply terminals.

Consumer Service Contact: email: support@rnrgames.com Telephone: 1-888-8RIDDLE (874-3353) Hours: Monday through Friday, 9:00 AM to 5:00 PM, Eastern Time. www.rnrgames.com

Warning: Changes or modifications to this unit not expressly approved by the party responsible for compliance could void the user's authority to operate this equipment. NOTE: THIS DEVICE COMPLIES WITH PART 15 OF THE FCC RULES Operation is subject to the following two conditions: 1) This device may not cause harmful interference, and 2) This device must accept any interference received, including interference that may cause undesired operation. ©2004 R&R Games, Inc. All Rights Reserved.

**WWW.RNRGAMES.COM 1-888-8RIDDLE**

